
Super GSM Reader Version 3.16.16.1 Read Me

Copyright(c) Super GSM Reader V 3.16.16.1

=====
CONTENTS
=====

Overview

- Installing the Super GSM Reader USB driver
- To Install Super GSM Reader
- To Insert the SIM Card to Super GSM Reader
- To Run Super GSM Reader
- To Uninstall Super GSM Reader

=====
OVERVIEW
=====

Super GSM Reader is a program component that allow
you to record and edit the Phone Book and Short Message(SMS) in SIM Card.

In order to use Run Super GSM Reader, you must have the following
configuration:

- 486 processor and 4MB RAM or greater (Pentium/133, 16MB RAM
Recommended)
- Microsoft Windows 98 SE/2000/Me/XP

Installing the Super GSM Reader USB driver

-
- 1) Plug the Super GSM Reader into an empty USB port in your PC.
 - 2) Click the next button.



3) Click the next button.



4) Please insert the original Microsoft Windows OS installation disk and click the next button.



5) Click the next button.



To Install Super GSM Reader

1. Click the Start button, and then point to Run
2. Type in CD ROM : \setup.exe(D is your CD ROM Directory)

To Insert the SIM Card to Super GSM Reader



To Run Super GSM Reader

1. Insert the SIM Card to Super GSM Reader.
2. Plug the Super GSM Reader into an empty USB port in your PC
3. Click the Start button, and then point to Programs.
4. Point to the Super GSM Reader group.
5. Click the Super GSM Reader program icon.

To Uninstall Super GSM Reader

1. In the Control Panel, double-click the Add/Remove Programs icon.
2. Click the Install/Uninstall tab.
3. Click Super GSM Reader.
4. Click the Add/Remove button.
5. Super GSM Reader will be uninstalled.